


How to Measure for Drapes

You will need:

- A retractable metal measuring tape
- A pencil
- A paper pad

It is a good idea to get curtain rods and fix them in place before you order your curtains.

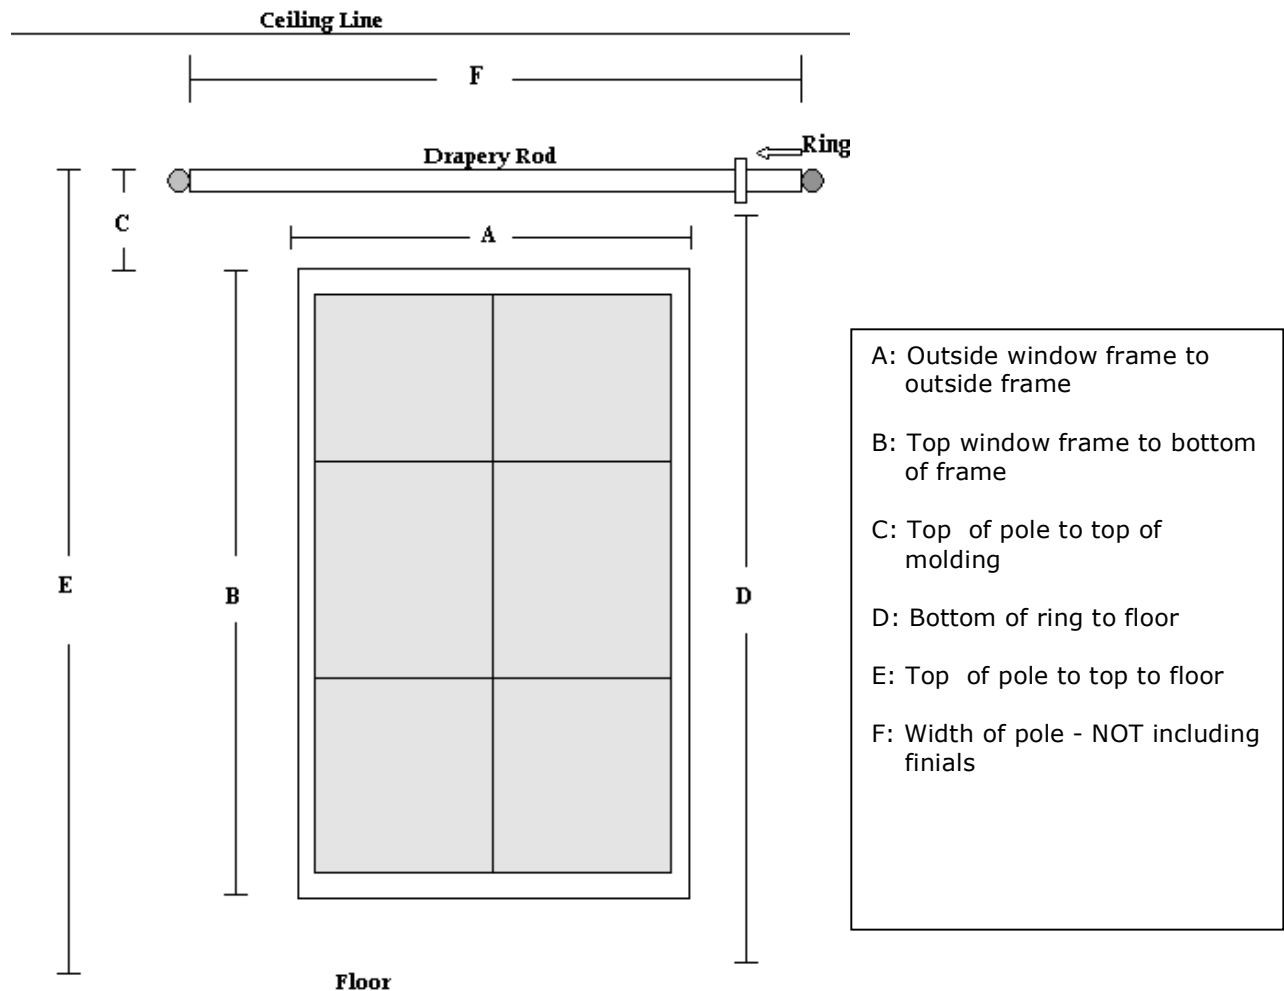

Measuring length

How high to set the rod? Panels should be about 4-6" above the top of the window opening or molding. You can also mount the rod up to the crown molding or ceiling to add height to the room - a great idea for rooms with 8' ceilings.

Rod Pocket Panels: Measure from the top of the pole to the floor (E) Note that there is some rod "take-up" when the material is gathered onto the pole. Add 1" for smaller rods and 2" for rods 2" in diameter or larger.

Panels hung from rings: Measure from the bottom of the ring to the floor (D) or to your desired length. If using rings with clips, measure from the clip to your desired length.. Set the pole high enough that the bottom of the ring is above the window molding.

Grommet Tops: Add 1" above the top of the rod for grommet allowance.